

CT Case History: Stuck WC Shoe on Top of RTTS Packer



GOM ~ December, 2011


Fish:

2.300" x 1.550" Carbide Shoe and loose carbide debris on top of RTTS packer and down to the top slips.

Slip button are carbide buttons.

2.300" x 1.550" XDS, Diamond Impreg Burn Shoe cut through WC debris, through the stuck WC shoe head, through the top slip buttons, through the rubber elements, and about 2/3 the way through the bottom slip buttons before the packer released.

Milling time about 13 hours

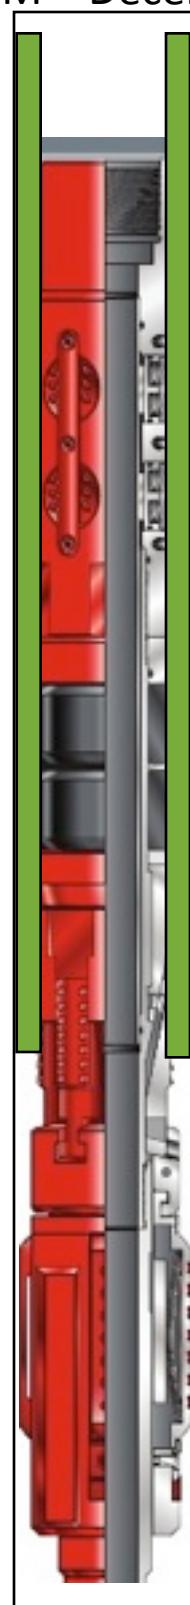

Short Bit & Tool Co.
225 Gold St
Garland, Texas 75042
972-205-1011 ~ fax 972-205-1005

CT Case History: Stuck WC Shoe on Top of RTTS Packer
GOM ~ December, 2011



Short Bit & Tool Co.
225 Gold St
Garland, Texas 75042
972-205-1011 ~ fax 972-205-1005